




# WIRING INSTRUCTIONS


## SMM Steel Canopy V4 MITSUBISHI TRITON MN 2009-2015



FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	Black/Brown
Rear Demister	Yellow/Red	Black/Brown
Central Locking(Lock)	Blue	Blue/Brown
Central Locking(Unlock)	Green	Blue/Black
Earth	Black	Body of the car
Brake Light	Red	Blue/Orange (Plug A)
Earth	Black	Black (Plug A)

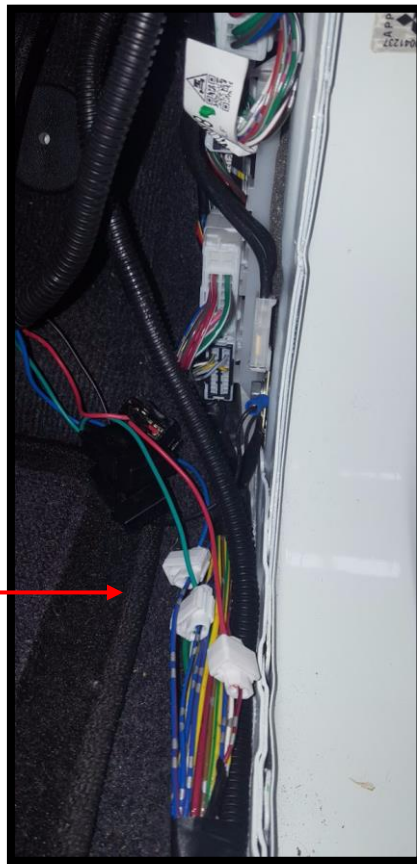

- Wires are at the front of the vehicle on the drivers side behind the kick panel.
- Plug A is behind the rear tail light
- The rest of the connections are under the underneath the floor kick panel.

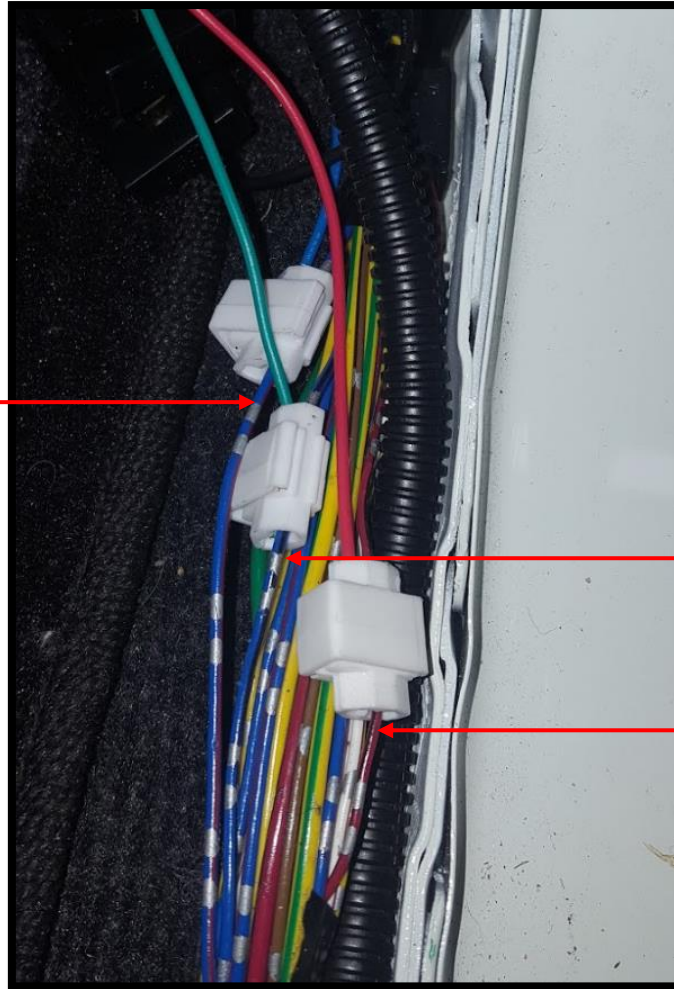


Blue to Blue/Brown (Central Locking- Lock)

Green to Blue/Black (Central Locking- Unlock)

Red to Black/Brown (Constant Power-Dome light)


## Connections under floor kick panel.

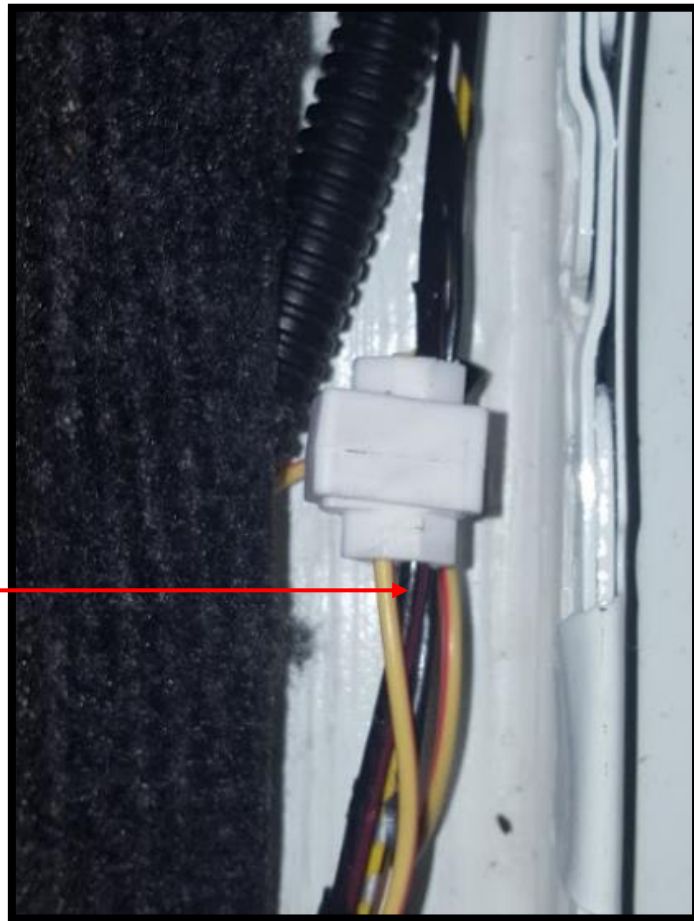

Yellow/Red to Black/Brown (Rear Demister)

Black to Body of the car (Earth)

## Plug A

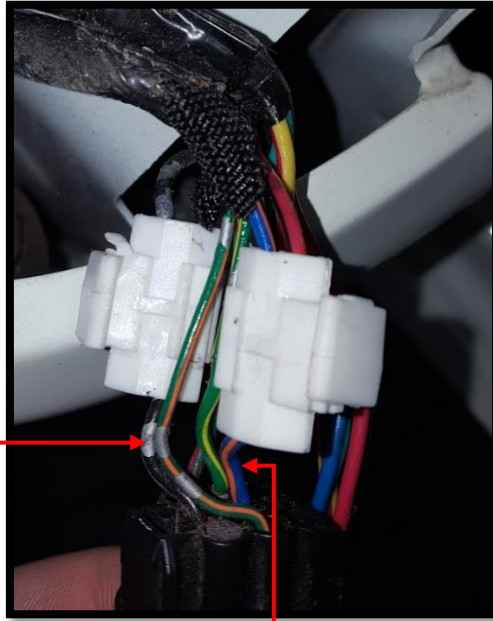

Red to Blue/Orange (Brake Light)

Black to Black (Earth)

## Running the loom

You will find an opening with a grommet sealing it under the rear RHS seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.



## **PLEASE NOTE**

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.