



## FITTING INSTRUCTION


### TOYOTA REVO

## Note :

Apply WD40 or grease to the moving parts regularly for good performance of the product.

Patent Pending Worldwide

### Part list

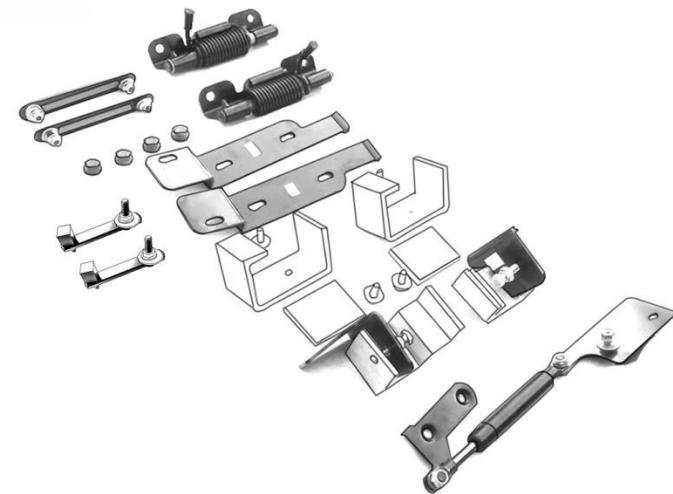

### Tooling



No.12


No.10

No.12

Patent Pending Worldwide




1. Take off tailgate cover plate

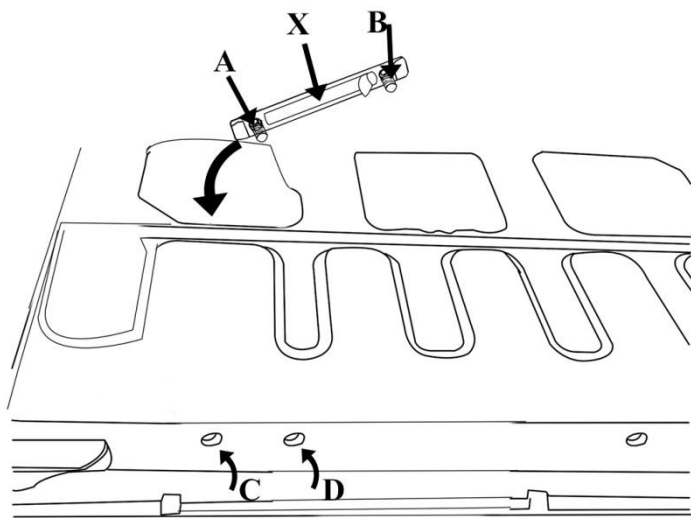


2. put bracket X into the tailgate (peel off glue tape and stick it inside the tailgate). Place bolt A&B through hole C&D

**CAUTION**

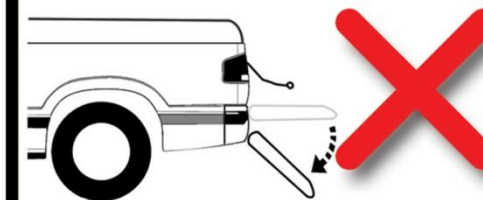


Do not take off  
tailgate cable  
and drop down  
the tailgate

### 11. Install damper bracket (with tailgate)

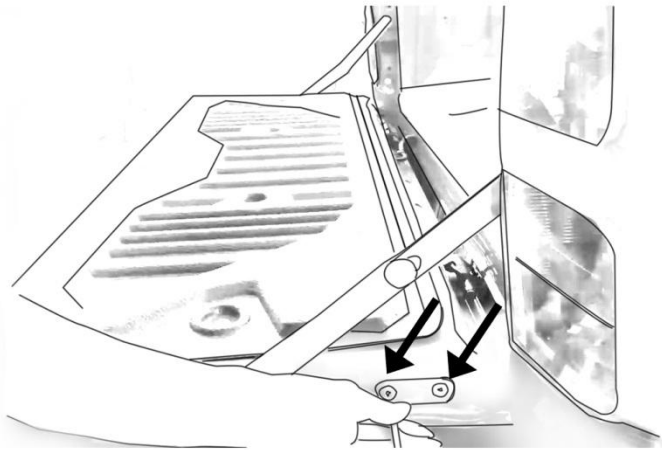


take off original bolts

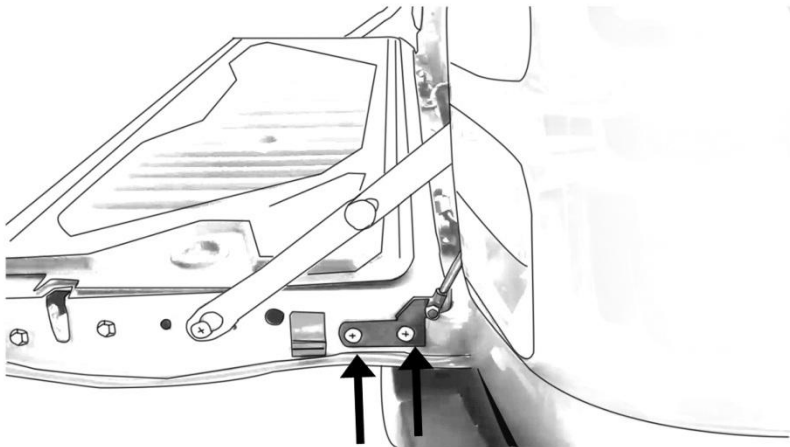


put damper bracket and tighten back the original bolt.

Process #3 - #5 is done while tailgate in close position.



### 3. Put ProLift bracket with tailgate (from the bottom)

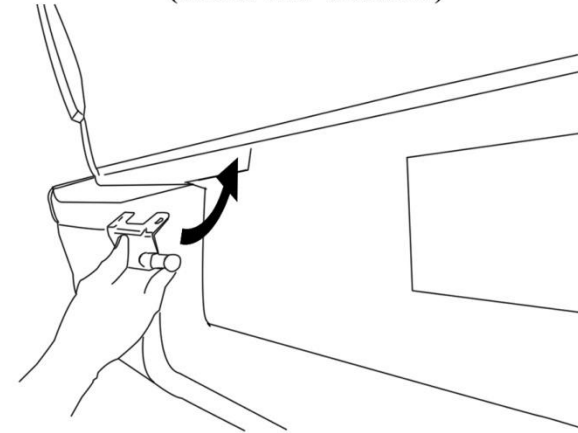


### 4. Tighten nut E&F

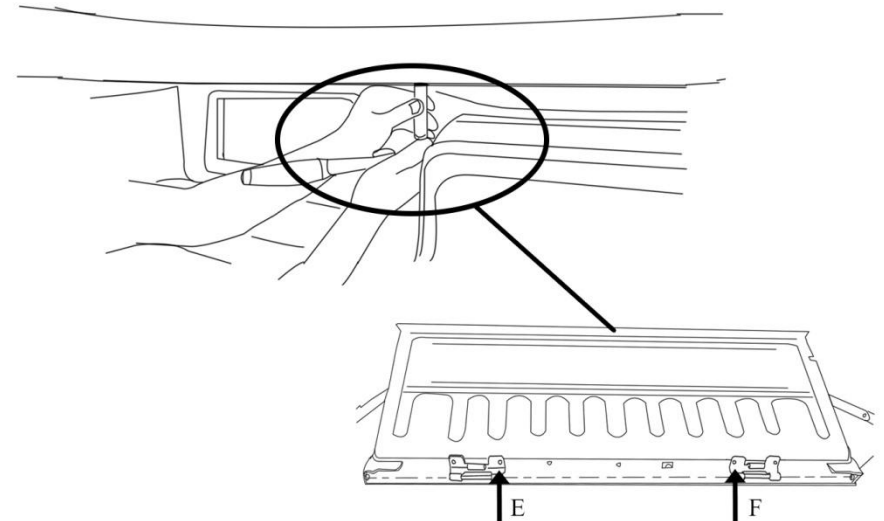

## Install spring leaning bracket

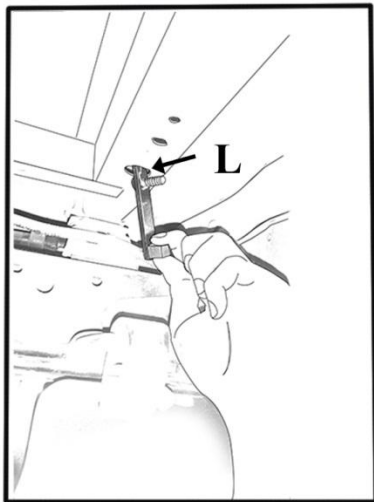
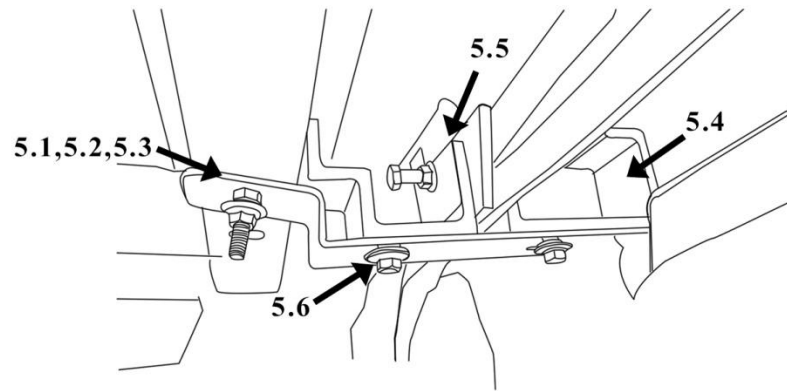


**5.1 put bolt-welded bracket (L) to the position.**




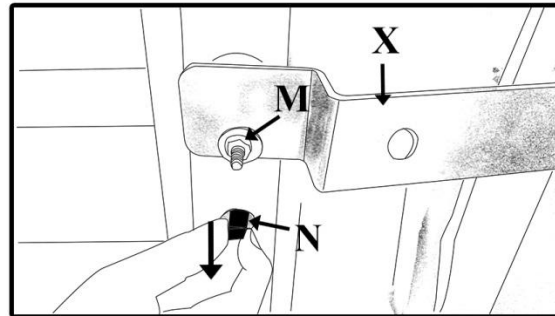


**5.2 put main bracket (X) in position.  
Finger tighten nut M**


## 10. Install damper bracket

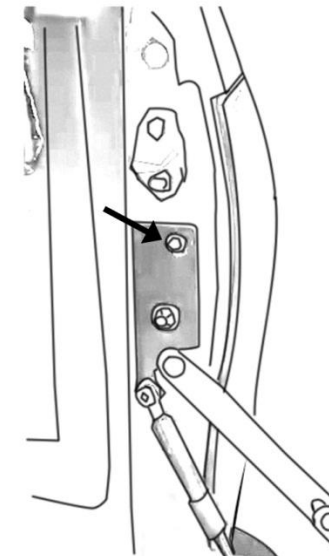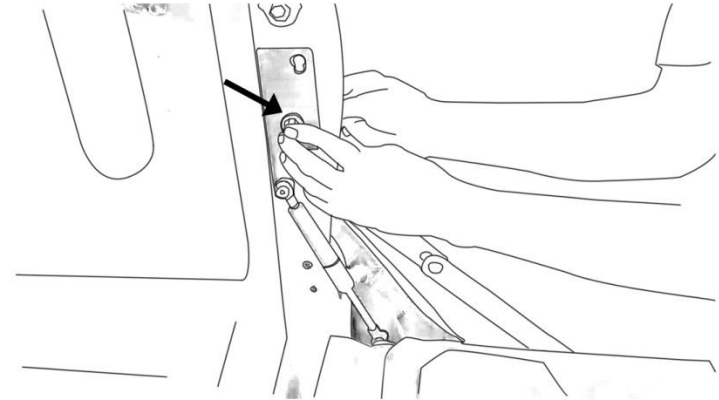

**9. Take off rubber bumper and cut as picture below  
and put it back**

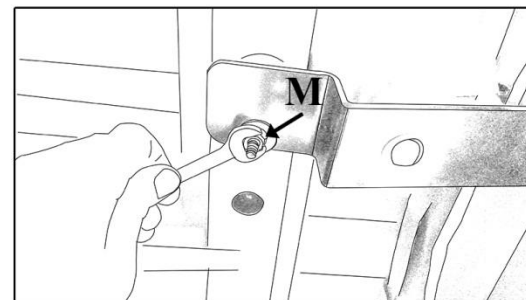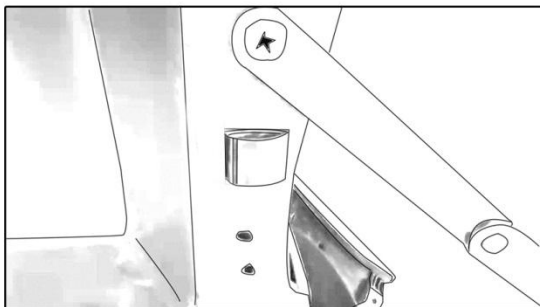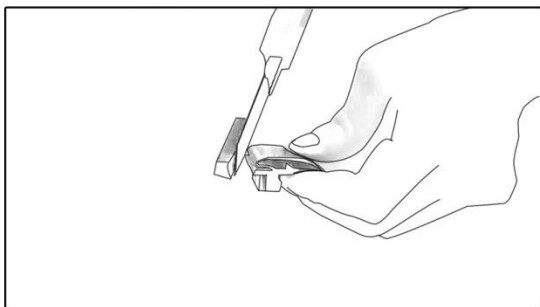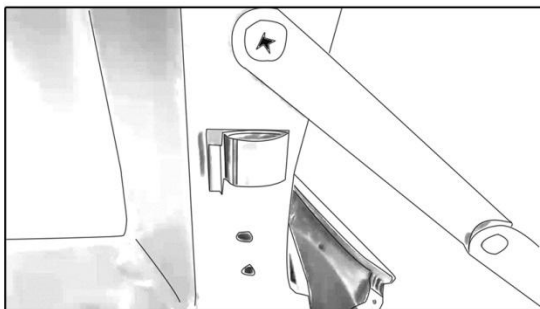


**5.3 tighten nut (M)**

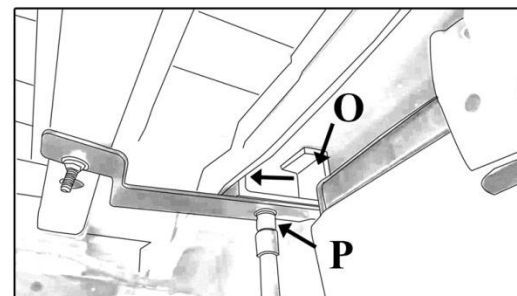


**5.4 put aluminium part (O)  
in place  
and tighten bolt (P)**



**5.5 put bracket (Q) in place  
and tighten bolt (R)**

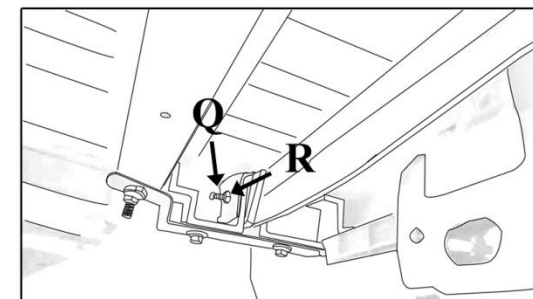


**5.6 tighten bolt (S)**

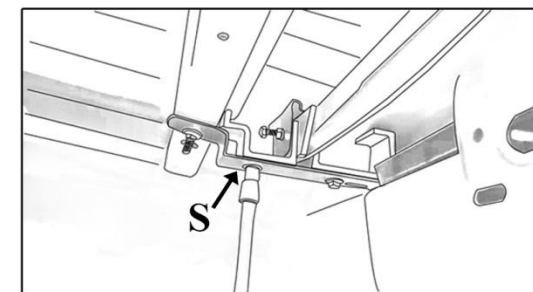

### 6. Tighten nut G&H

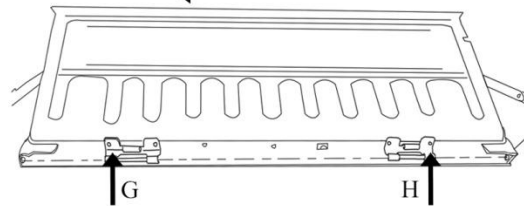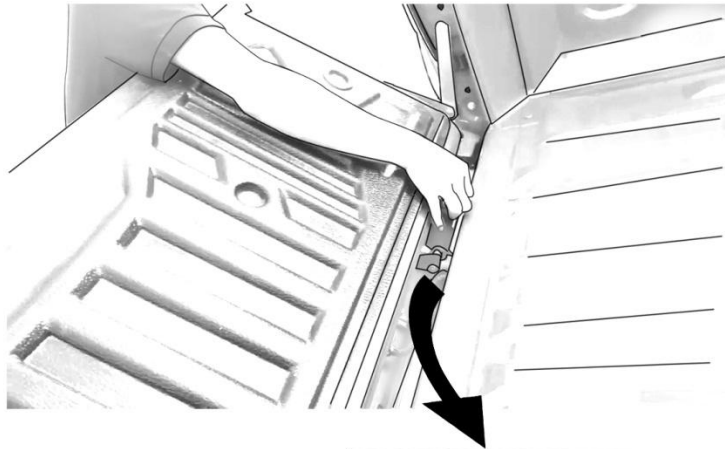


### 7. Put plastic plugs cover nuts

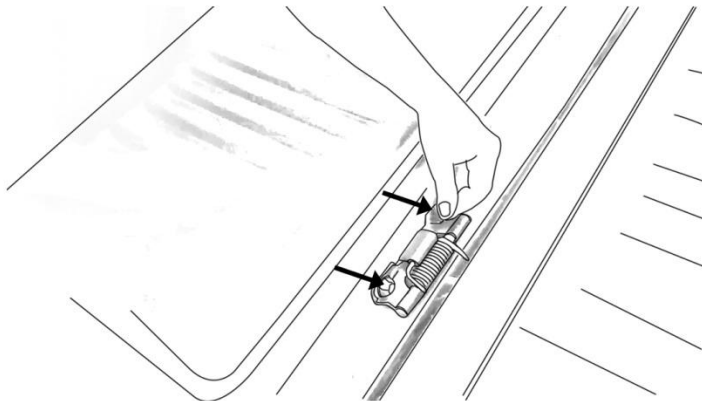


## Install damper

### 8. Unbolt I&J

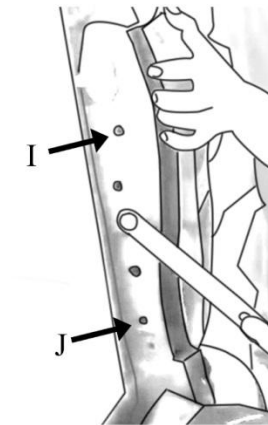

Unbolt I&J

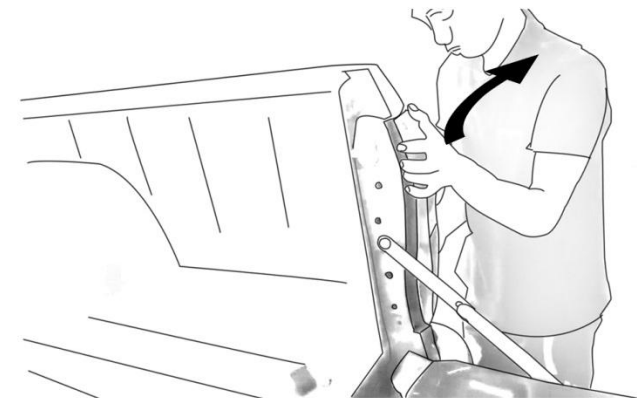

Take out rear light cover  
(direction to the side of the truck)