


Tub Support Bracket Installation Mazda BT-50/Ford Ranger PX



PARTS REQUIRED: 8mm Bolts (qty 4), 8mm Spring Washers (qty 4), 8mm Flat Washers (qty 4), 6mm Bolts (qty 2), 6mm Spring Washers (qty 2), Flat Washers (qty 2), Rubber Support (qty 1), Left Side Bracket (qty 1), Right Side Bracket (qty 1)

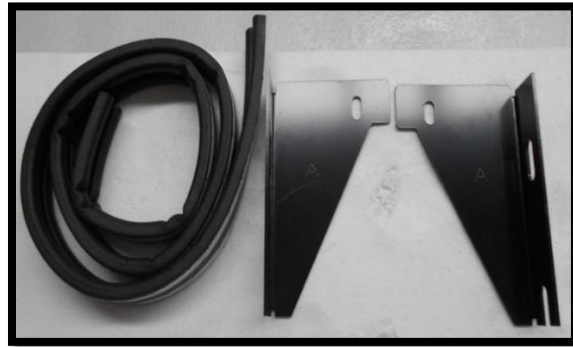

INSTRUCTIONS:

1. Put all three bolts in loosely
2. Adjust the bracket so the top of it sits flush with the side of the tub. (The lip on the top of the bracket sits higher than the front of the tub)
3. Tighten all three bolts
4. Repeat steps for other side
5. Lay the rubber support across the front of the tub

